


GPS Tracker Instructions

TRACKER PLACEMENT

- Outside
- As high above **water line as possible** - on light pole, on mast bottom or boom vang for example.
- **Front side of the pouch outwards** or towards sky.
- GPS tracker is already working - there is no need to push any buttons.

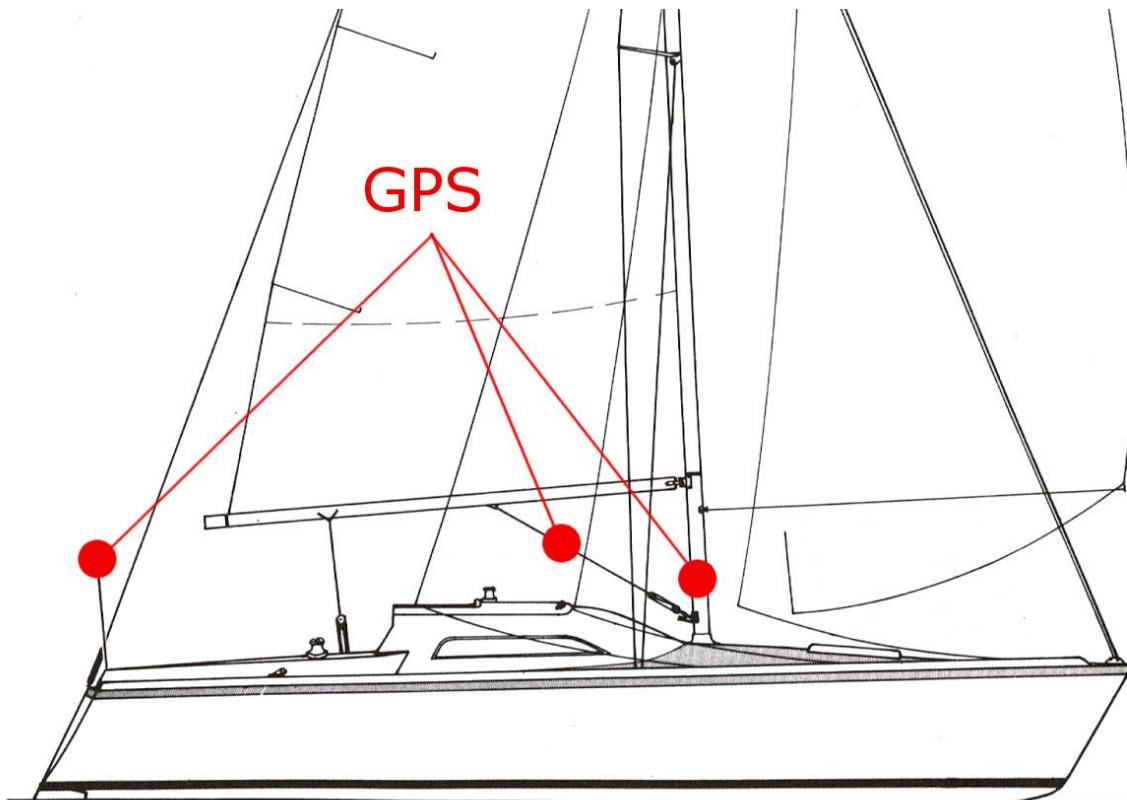

The trackers are already working in power saving mode and will be automatically activated about 1 hour before start. It is recommended to visit the GPS tracking page and check that the boat is visible. If it is not visible, please check the tracker that GSM LED is blinking slowly every 3 sec. If it is blinking fast, every 1 sec, please restart the tracker from power button. If this does not help, please call support +372 56 669 977.

RETURN

- GPS tracker must be returned to with the finish report immediately after finishing.
- If tracker and/or strap is lost, the boat must compensate 150 EUR for tracker and 15 EUR for the strap. Please attach the tracker so securely, that it will not come loose or out of the pouch even at rough sea.

LIVE TRACKING

- Long course: <https://sportrec.eu/ui/#1fi7jhp>
- Straight course: <https://sportrec.eu/ui/#1fi7jdh>